



Item code: 19-BSS-002
 Include all fittings, tubes and filter
 shown on the drawing
 CO₂ filter is supplied with BioTector

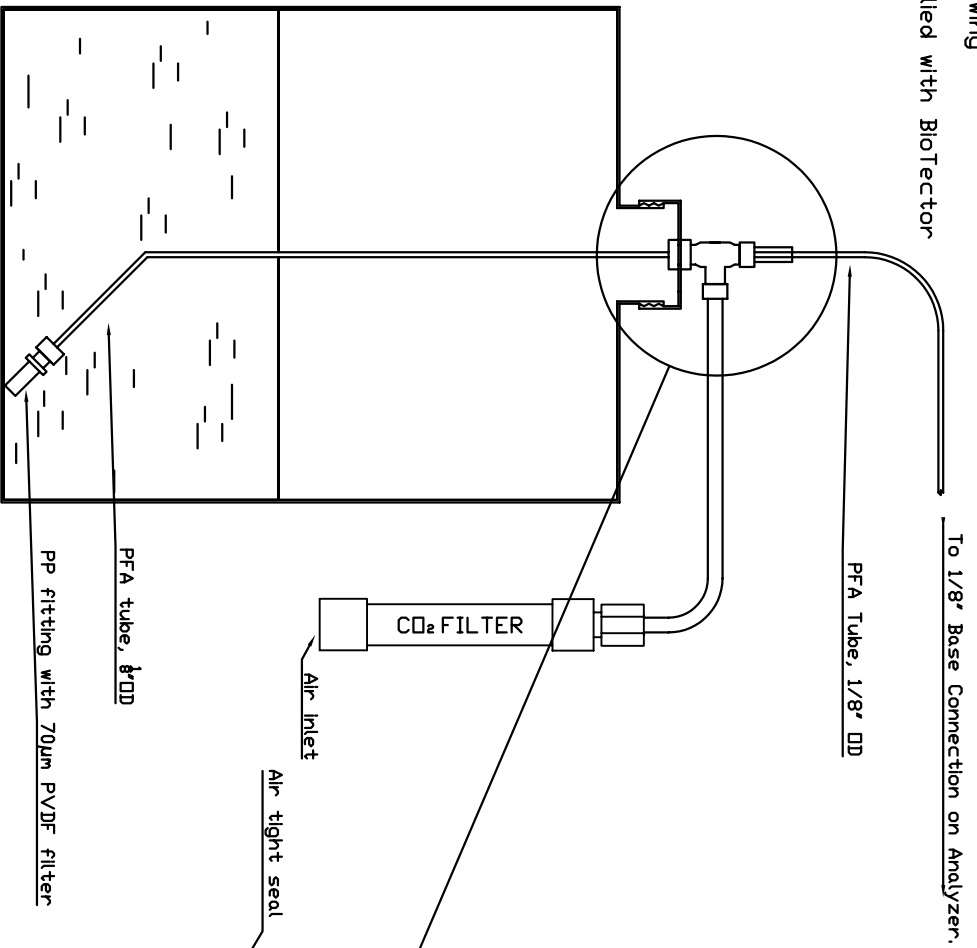

BASE CONTAINER.

1. CUT THE TUBE TO LENGTH FOR THE BASE CONTAINER BEING USED.
2. ATTACH THE FILTER TO THE DIP TUBE SO THAT IT SITS AT THE BOTTOM OF THE CONTAINER AS SHOWN.
3. THE TEE FITTING MUST FORM AN AIRTIGHT SEAL WITH THE CAP.
4. THE CO₂ FILTER MUST BE CONNECTED TO THE TEE AS SHOWN.
5. DO NOT DRILL A HOLE IN BASE CONTAINER'S CAP.

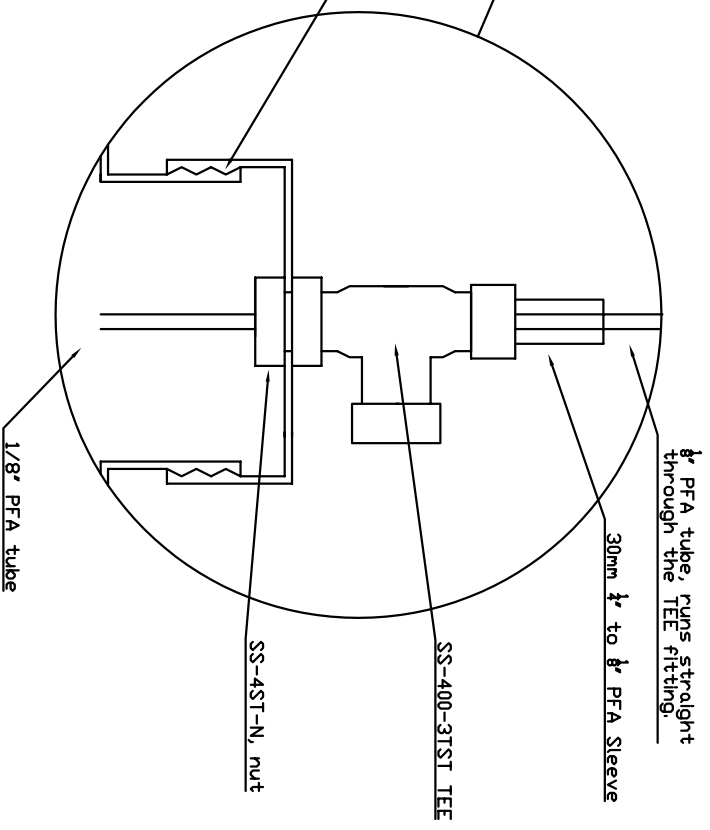

DETAIL OF THE CAP.

REV.	DETAILS	DATE
x1	First issue ECD0081	16/1/12
x2	ECD0126	28/6/12



PROJECT: BioTector System-C	SCALE: N.T.S.
DWG. TITLE: Base dip tubes	DATE: 16/1/12
DWG. NO: 81105002_1	DR.BY: STM
	CHKD.BY: MP
	VERSION: x2